

How to find a waypoint using a Garmin eTrex GPS Unit



Page Button

On/Off Button

Toggle Button



1. Turn GPS Unit on, hold button in until display activates.

2. Wait until display reads 'ready to navigate', this means there are enough fixes to locate waypoints.

3. Use the Page Button to find the icons page

4. Use the Toggle Button to highlight the 'Find' icon, moving up/down or left/right


5. Push straight down on toggle button to select 'Find' function

6. Select the 'Waypoints' option by pushing straight down on Toggle Button




7. Highlight the “By Name” option using the Toggle Button.

8. Select ‘By Name’ option, by pushing straight down with the Toggle Button.

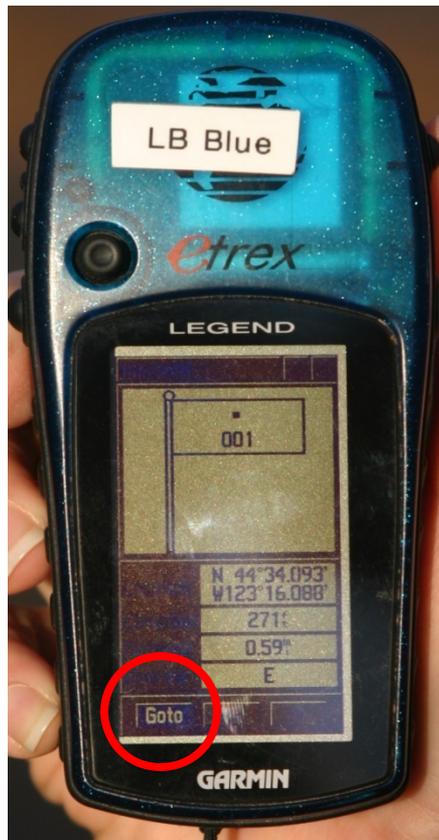

9. Use the Toggle Button to highlight ‘GoTo’ function, moving up/down or right/left

10. Select ‘GoTo’ function by pushing straight down on the Toggle Button

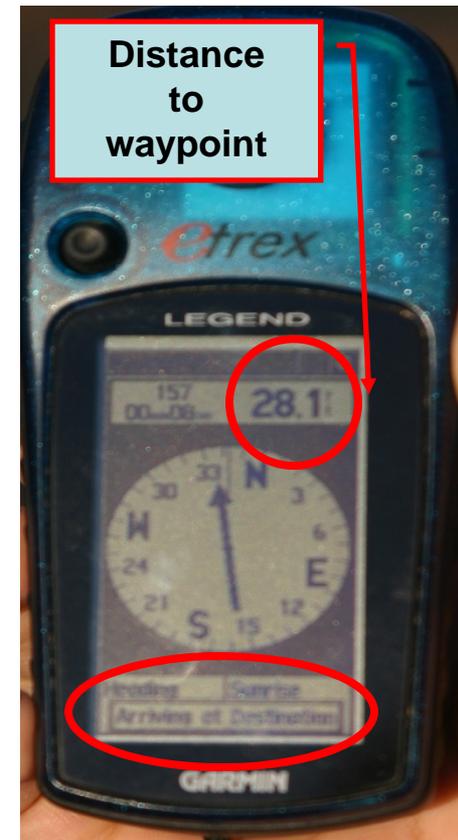

11. The compass page should appear. Use the Page Button to find this page if necessary.

12. Follow the compass arrow until the unit reads ‘Arriving at Destination’